

Astra. Manual.

Lockride Astra is easy to mount on your rear carrier, just take your time. If you have any questions and/or comments, please feel free to contact info@lockride.nl. Tools needed: **Allen 3, Socket 10.**

Step 1. Remove the battery and remove the screws.



1.1 Unlock the battery.



1.2 Remove the battery from the carrier.



1.3 Remove the original screws from the battery docking.



1.4 Remove the rear light and place it behind the stays to prevent the cable from damaging.

Step 2. Position the Lockride Astra.



2.1 Place the Lockride with the two hooks behind the lighting bracket.



2.2 Push the Lockride against the luggage carrier without gaps.



2.3 The Lockride can now be fixed using the L bar. Make sure the closest distance holes are placed upwards.




2.4 Use the spring washer and shear nut to fix the L profile lightly. Don't fully tighten the nuts and make sure to place them in the correct order as in the picture.

Step 3. Mount the Lockride Astra.



3.1 Make sure the Lockride is still placed against the carrier without gaps.

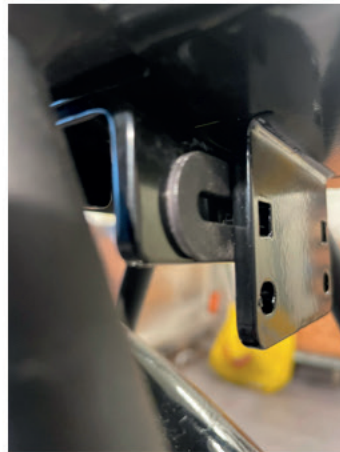

3.2 Also check that the vertical flanks touch each other.



3.3 Now the nuts can be tightened. Fully tighten the first nut before doing the other. Also use your allen key to make sure the bolt is not unscrewing itself when you tighten the nut.



The shear nuts will break at a force of 12 Nm. This leaves a conical shaped nut that protects against theft. If available, you can also use a torque wrench for this step.

Step 4. Attach the rear light.




4.1 Position the rear light and make sure the bolts are placed at the inner slots.



4.2 Use the original nuts to fix the light on the lower positioned holes.



4.3 Place the Lockride pin and attach your padlock.

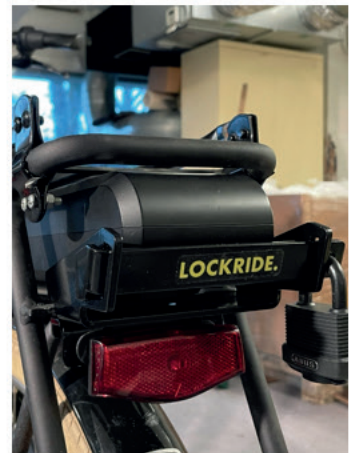

4.4 Voilà you are now done installing your Astra. 🚀