

Model Y. Manual.

Lockride Model Y is quick and easy to assemble. Feel free to contact info@lockride.nl with any questions and/or comments.

Required tools: **glue gun**, **mixing nozzle**, **two-component adhesive**, a **cloth** with **degreaser**, and a piece of **cardboard**.

Before you start.

- The Model Y is glued to the cover of the in-tube battery.
- Check the article number on the glue: LR022236.
- Wear gloves and a mask, and work in a well-ventilated area.
- The mixing nozzle can only be used once; once the glue hardens inside (if it hasn't been used for about 30 seconds), the nozzle can no longer be used.

Step 1. Voorbereiding.

1.1 Check if the battery lock is suitable for your bike. Hold the lock in the position where you want to glue it and check if there is no obstruction during use of the bike. Make sure there is enough space at the front wheel, even when the padlock is attached. Check carefully if the battery lock does not cover an on/off button on the battery. Also check if the charging point is still accessible.

1.2 Remove the battery from the bike. Degrease the surfaces to be glued and prepare the battery lock and battery for gluing. Make sure that the letters LR are not upside down when you put the battery back in the bike! Prepare the glue gun by placing the glue in the gun.




Step 2. Gluing. Note, perform this entire step within 30 sec.



2.1 First, use the glue gun to pump some glue onto the cardboard, because the mixing ratio is not yet correct.

2.2 Now pump 5x (± 25 ml) of glue in one line onto the center of the battery slot.

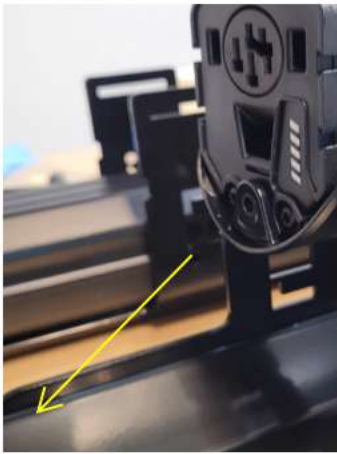

2.3 Place the battery straight, in the middle of the battery slot on top of the glue. Check carefully that the space on both sides of the battery is equal.

2.4 Check carefully that the battery lock is glued parallel to the battery. Now let the glue dry.


Step 3. Let it dry for a while.



3.1 In the meantime, stick the supplied piece of foam rubber onto the inside of the pin.

3.2 After 15 minutes the glue has hardened and the battery can be replaced (full hardening takes place after 24 hours). Then place the pin in the bracket and place the ABUS lock. You can now hit the road again. ⚡

The Model Y comes in different versions. The assembly is the same for each model.



Model Y for Ultimate

Model Y for Grenoble

Model Y for Nevo

More to come..